


ASSEMBLY INSTRUCTIONS

ROD KIT / SWIVEL KIT

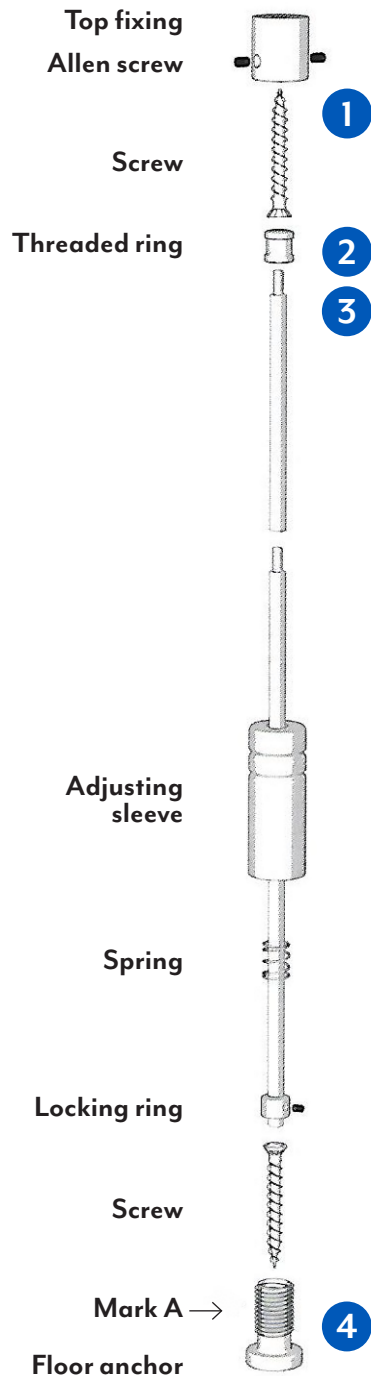

1. Fix the **Top fixing** into ceiling using the provided **Screw**.
2. Screw the **Threaded ring** into the rod.
3. Insert the **Threaded ring** into the **Top fixing**, then secure the two screws with the Allen key, to fix it into the **Top fixing**.
4. Fix the **Floor anchor** (aligned with the Top fixing) into the floor, using the provided **Screw**.
5. Place the rod manually close the **Floor anchor** and then cut it with a saw so it could reach halfway up to the **Floor anchor Mark A**. Pass the rod through the **Adjusting sleeve**, the **Spring** and the **Locking ring**.
6. Leave 1/4" clearance between the bottom of the lower **Locking ring** and the top **Floor anchor**, fix firmly the lower **Locking ring** with the provided screw.
7. Fix the **Adjusting sleeve** into the **Floor anchor** without over-tightening it.

